



Connection	One-touch fitting	
Vacuum entry direction	Lateral Male thread	
Mounting		



Connection	One-touch fitting	
Vacuum entry direction	Lateral	
Mounting	Female thread	

How to Order

AZPR 02 U N - 04 - A5

①②③Refer to the pad model on page 108


⑤ Mounting thread(Refer to table ①)

Table ①

Connection		Symbol	Tube/Male thread	Ф2~Ф8	Ф10~Ф16	Ф20~Ф32	Ф40~Ф50
1/	One-	04	Φ4 tube	•	•	•	2-0
Vacuum entry	touch	06	Φ6 tube	•	•	•	•
,	fitting	08	Φ8 tube	,	_	•	•
	Mala	A5	M5 × 0.8	•	•		-
Mounting threa	Male thread	A6	M6 × 1	•	•	•	•
		A8	M8 × 1		-	•	•
		B4	M4×0.7	•	_	_	_
	Female thread	B5	M5 × 0.8	•	•	•	_
		B6	M6 × 1	_	•	•	•
		B8	M8 × 1.25		_	•	•

(●— Selective)


Dimensions (mm)

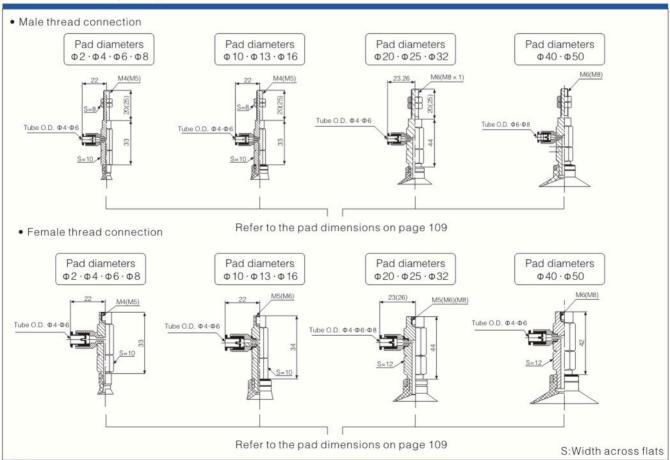

TXC

BH Bulkhead Connector

 Ball Joint



Connection	One-touch fitting
Vacuum entry direction	Lateral
Mounting	Use Male thread



How to Order

AZPR 02

①②③ Refer to the pad model on page 108

Buffer style

_		
J	Rotating	
K	Non-Rotating	

 Vacuum entry(Refer to table ①)

 Mounting thread(Refer to table ①)


Buffer stroke(mm)

Buffer stroke	Pad diameters
6	Φ2~Φ8
10	Φ2~Φ50
15	Φ2~Φ8
20	Ф 10~ Ф 50
25	Φ2~Φ8
30	Φ10~Φ50
40	Ф10~Ф32
50	Ф10~Ф50

Table ①

Conne	ection	Symbol	Tube/Male thread	Ф2-Ф8	Ф10-Ф16	Ф20-Ф32	Φ40-Φ50
	One-	04	Φ4 tube	•	•	•	
Vacuum entry	touch	06	Φ6 tube	•	•	•	•
,	fitting	08	Φ8 tube		_	•	•
		A8	M8 × 1	•	-	_	
Mounting	Male thread	A10	M10×1	_	•	•	<u> </u>
	lilledu	A14	M14×1	_	-	_	_

Dimensions (mm)

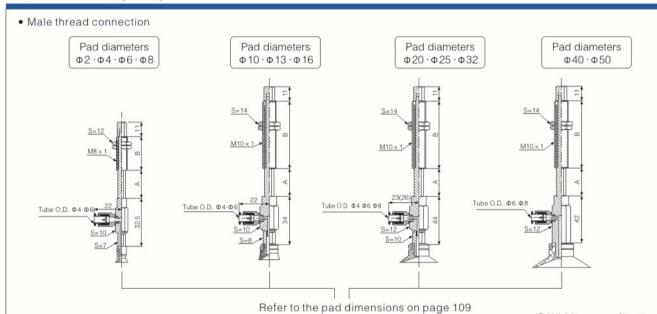

S:Width across flats

Buffer stroke

10

20

30

40

		(mm)
Buffer stroke	Α	В
6	8	15
10	11	43
15	16	43
25	26	43

		(mm)
Buffer stroke	Α	В
10	11	23
20	21	51
30	31	51
40	41	77
50	51	77

		(mm)
Buffer stroke	Α	В
10	11	23
20	21	51
30	31	51
40	41	77
50	51	77

(mm)

В

50

50

50

75

Α

12

22

32

52