

How to Order

PS - ① 6 - ② M - ③ N

① Pad Diameter(mm)

PFG	PJG
6	25
8	30
10	35
15	40
20	50
	30-J
	40-J
	50-J

② Connection thread

M	Male thread
F	Female thread

③ Pad Material

N	Nitrile Rubber
S	Silicone
NE	Nitrile ESD
SE	Silicone ESD



Features


☆ Add inner teeth and outer teeth fixed screw to PF and PJ vacuum pad. It is easy to install.

☆ It is fit to suck small-sized steel plate, glass and soon.


Dimensions (mm)

Male thread connection

• PS-M

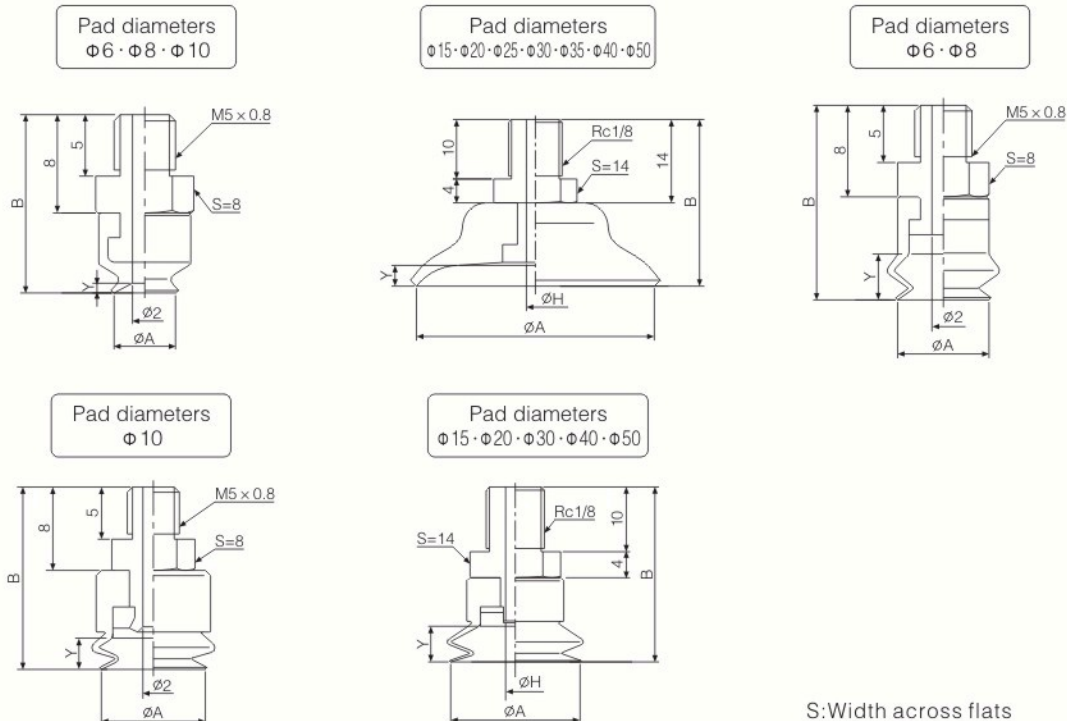


• PS-F

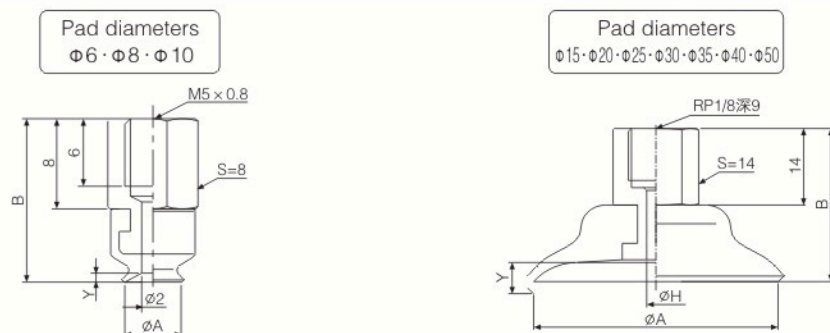

PS	A	B	H	Y
PS-6-M	6	14.5	—	0.8
PS-8-M	8	15	—	1.2
PS-10-M	10	15.5	—	1.5
PS-15-M	15	22	2	1.9
PS-20-M	20	24	3	2.3
PS-25-M	25	28	3	3
PS-30-M	30	26	3	2
PS-35-M	35	28	3	3
PS-40-M	40	28	3	3.5
PS-50-M	50	29	4	4
PS-6-J-M	6	17	—	4.2
PS-8-J-M	8	17	—	4
PS-10-J-M	10	17.5	—	3
PS-15-J-M	15	25	2	3.3
PS-20-J-M	20	27	2	5.5
PS-30-J-M	30	32	3	7
PS-40-J-M	40	32	3	7.2
PS-50-J-M	50	34	4	9
PS-6-F	6	14.5	—	0.8
PS-8-F	8	15	—	1.2
PS-10-F	10	15.5	—	1.5
PS-15-F	15	22	2	1.9
PS-20-F	20	24	3	2.3
PS-25-F	25	28	3	3
PS-30-F	30	26	3	2
PS-35-F	35	28	3	3
PS-40-F	40	28	3	3.5
PS-50-F	50	29	4	4

Female thread connection

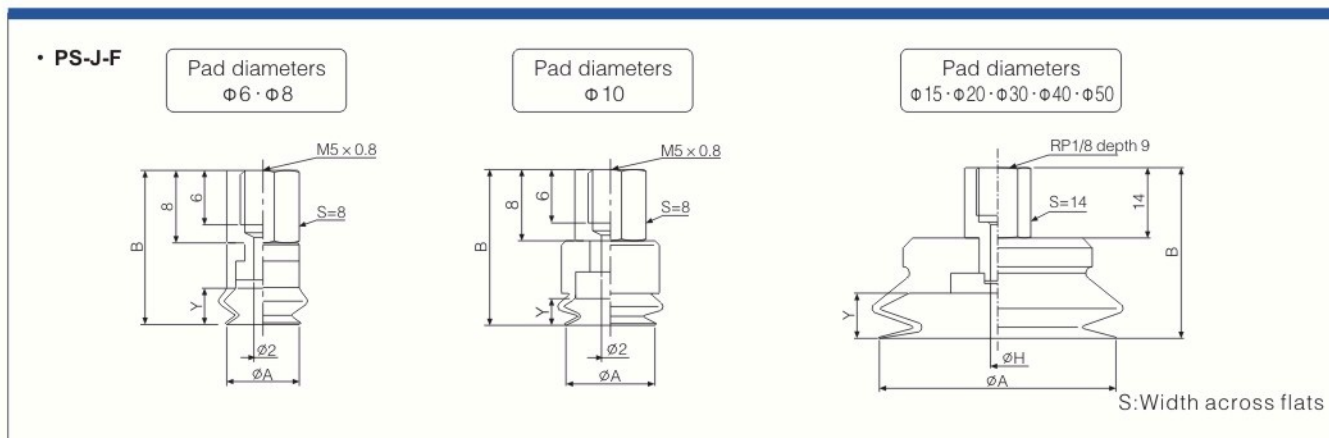

PS	A	B	H	Y
PS-6-J-F	6	17	—	4.2
PS-8-J-F	8	17	—	4
PS-10-J-F	10	17.5	—	3
PS-15-J-F	15	25	2	3.3
PS-20-J-F	20	27	3	5.5
PS-30-J-F	30	32	3	7
PS-40-J-F	40	32	3	7.2
PS-50-J-F	50	34	4	9