

## Technical Data Sheet

Pressure / Temperature / Humidity / Air Velocity / Airflow / Sound level

# LV 110 - LV 111 - LV 117

#### **KEY POINTS**

- Airflow calculation

- Hold-min-max function

- Automatic average

- Selection of units

#### TECHNICAL FEATURES

Measuring elements	Air velocity : Hall effect sensor Ambient temperature : NTC sensor	
Display	4 lines, LCD technology. Sizes 50 x 36 mm 2 lines of 5 digits with 7 segments (value) 2 lines de 5 digits with 16 segments (unit)	
Vane probe diameter	LV111: Ø 14 mm / LV117: Ø 70 mm / LV110: Ø 100 n	nm (2.1)
Cable	Coiled, Ig. 0.45 m, extension : 2.4 m	8.5
Housing	ABS, protection IP54	0.0
Keypad	5 keys	-∳- ок ⊕
European directives	2014/30/EU EMC ; 2014/35/EU Low Voltage ; 2011/65/El RoHS II ; 2012/19/EU WEEE	U FOLD MOLE MANAGEMENT AND MOLE MOLE MOLE MOLE MOLE MOLE MOLE MOLE
Power supply	4 batteries AAA LR03 1.5 V	LV 110
Battery life	120 hours	
Ambience	Neutral gas	a di
Conditions of use (instrument) (°C, %RH, m)	From 0 to +50 °C. In non condensing conditions. From 0 to 2000 m.	
Operating temperature (probe)	From 0 to +50 °C	
Storage temperature	From -20 to +80 °C	
Auto shut-off	Adjustable from 0 to 120 min	Ø70 mm vane probe
Weight	390 g	FUNCTIONS

#### **SPECIFICATIONS**

G. EG. 10, 110, 40						
Models	Measuring units	Measuring range	Accuracy <sup>1</sup>	Resolution		
Air velocity						
LV111 : Ø 14 mm	m/s, fpm, km/h	From 0.8 to 25 m/s	From 0.8 to 3 m/s : ±3% of reading ±0.1 m/s From 3.1 to 25 m/s : ±1% of reading ±0.3 m/s	0.1 m/s		
LV110 : Ø 100 mm	m/s, fpm, km/h	From 0.3 to 35 m/s	From 0.3 to 3 m/s : $\pm 3\%$ of reading $\pm 0.1$ m/s From 3.1 to 35 m/s : $\pm 1\%$ of reading $\pm 0.3$ m/s	0.01 m/s 0.1 m/s		
LV117 : Ø 70 mm	m/s, fpm, km/h	From 0.4 0 to 35 m/s	From 0.4 to 3 m/s : $\pm 3\%$ of reading $\pm 0.1$ m/s From 3.1 to 35 m/s : $\pm 1\%$ of reading $\pm 0.3$ m/s	0.1 m/s		
Airflow						
All models	m³/h, cfm, l/s, m³/s	From 0 to 99 999 m³/h	±3% of reading ±0.03 * area (cm²)	1 m³/h		
Temperature						
All models	°C, °F	From -20 to +80 °C	±0.4 % of reading ±0.3 °C	0.1 °C		

#### **FUNCTIONS**

Airflow calculation

Airflow calculation with cone (LV 110/117)

Ø14 mm vane probe

Ø100 mm vane probe

- Automatic average
- Selection of units (air velocity, airflow and temperature)
- · Hold function
- Display of minimum and maximum values
- Configurable auto shut-off
- Backlight
- Detection of flow direction (LV 110/117)
- Selection of the type of cone
- Dimensions of rectangular and circular duct

\*Except class 110 S

K 25 - 85: Airflow cones for

anemometer LV 110

SUPPLIED WITH

Instruments are supplied with:


71.5 mm

#### OPERATING PRINCIPLES

#### Air velocity: Hall effect sensor

Rotation of the vane probe leads to a circular magnet of 8 poles. A dual Hall effect sensor, placed next to the magnet captures the signals of magnetic field polarity transition. The sensor signal is converted to electrical frequency and is proportional to the rotation velocity of the vane probe. Signal chronology allows to determine the rotation direction.

34.2 mm

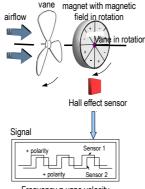

Frequency = vane velocity

#### Thermometer: CTN probe

Negative temperature coefficient probes are thermistors with a resistance that decreases with temperature according to the equation below:

$$\mathsf{R}_{(T)} \! = \! \mathsf{R}_{(T0)} \! \mathsf{e}^{- (\frac{\alpha}{100} \, \mathsf{x} \, (\mathsf{T}_{_0} \! + 273.15)^2 \, \mathsf{x} \, (\frac{1}{\mathsf{T} + 273.5} \, - \, \frac{1}{\mathsf{T}_{_0} + 273.5} \, ))$$

RT= resistance sensor value at temperature T R(T0)=resistance sensor value at reference temperature  $T_{_0}$  T and  $T_{_0}$  in °C

 $\alpha$  and  $\mathsf{T}_{\scriptscriptstyle{0}}$  sensor specific constants

### MAINTENANCE

MT 51 : ABS transport case

We carry out calibration, adjustment and maintenance of your instruments to guarantee a constant level of quality of your measurements. As part of Quality Assurance Standards, we recommend you to carry out a yearly checking.

#### **GUARANTEE**

Instruments have 1-year guarantee for any manufacturing defect (return to our After-Sales Service required for appraisal).

Distributed by:



Tel: +33. 1. 60. 06. 69. 25 - Fax: +33. 1. 60. 06. 69. 29

e-mail: export@kimo.fr