DIN W72×H72, W48×H96, W144×H72mm Counter/Timer


Features

- 36 input modes and 20 output modes
- Counting speed: 1cps/30cps/2kcps/5kcps
- Selectable voltage input (PNP) or No voltage input (NPN)
- Addition of Up/Down input mode
- Wide range of power supply: 100-240VAC 50/60Hz 12-24VAC 50/60Hz. 12-24VDC universal
- Selectable Counter/Timer by internal DIP switch
- Various time range
- Built-in Microprocessor





Ordering Information

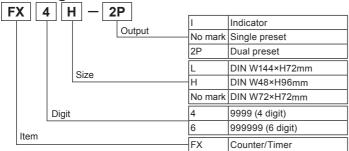

Specifications

	Single p	reset	FX4	FX6	FX4H	_	_
Model	Dual pre	eset	FX4-2P	FX6-2P	FX4H-2P	FX4L-2P	FX6L-2P
	Totalizer	(Indicator)	FX4-I	FX6-I	FX4H-I	FX4L-I	FX6L-I
Digit			4 digit	6 digit	4 digit	4 digit	6 digit
Digit size			W8×H14mm	V8×H14mm			
Power	AC power	er	100-240VAC 50	/60Hz		•	
supply	AC/DC p	ower	12-24VAC 50/60	Hz, 12-24VDC			
Allowable	voltage r	ange	90 to 110% of ra	ited voltage			
Power	AC pow	er	 Indicator type: 	Max. 6VA • Single	preset: Max. 7VA • Dual p	oreset: Max. 8VA (100-24	OVAC 50/60Hz)
con- sumption	AC/DC p	oower	Indicator type: Max. 5.8VA				
Max. coun	ting spee	d for CP1, CP2	Selectable 1cps	/30cps/2kcps/5kcp	s by internal DIP switch		
Min. input	RESET	input	Approx 20mo				
signal width	INHIBIT	input	Approx. 20ms				
	CP1, CP2 input		Input logic is selectable				
Input	(INHIBIT)		[Voltage input] Input impedance: 5.4kΩ, "H" level: 5-30VDC, "L" level: 0-2VDC				
	RESET input		[No-voltage input] Impedance at short-circuit: Max. $1k\Omega$, Residual voltage at short-circuit: Max. $2VDC$, Impedance at open-circuit: Min. $100k\Omega$				
One-shot output time		 Single preset type - 0.05 to 5sec. Dual preset type - 1st. output 0.5sec. fixed, 2st. output: 0.05 to 5sec. 					
	Contact	Туре	Single preset type	pe: SPDT (1c), Du	al preset type: 1st output S	PDT (1c), 2nd output SP	DT (1c)
Control		Capacity	250VAC 3A at re	esistive load			
output	Solid-	Туре	0 1	NPN open collect output 1 NPN ope	or en collector, 2nd output 1 N	PN open collector	
	state	Capacity	30VDC Max. 100mA Max.				
Memory p	rotection		Approx. 10 years (When using non-volatile semiconductor memory)				
External sensor power		12VDC±10% 50mA Max.					
Environ-	on- Ambient temperature		-10 to 55°C, storage: -25 to 65°C				
ment	nent Ambient humidity		35 to 85%RH, storage: 35 to 85%RH				
Insulation resistance		Min. 100MΩ (at 500VDC megger)					
Dielectric strength		2000VAC 50/60Hz for 1 minute					
Noise	AC po		±2kV the square wave noise (pulse width: 1μs) by the noise simulator				
strength	DC pc	ower	±500V the square wave noise (pulse width: 1µs) by the noise simulator				

J-50 Autonics


Specifications

 									
Vibration	Mechanical	0.75mm amplitude at frequency of 10 to 55Hz (for 1 min.) in each X, Y, Z direction for 1 hour							
VIDIALIOII	Malfunction	0.5mm amplitude at frequency of 10 to 55Hz (for 1 min.) in each X, Y, Z direction for 10 min.							
Ohaali	Mechanical	300m/s² (approx. 30G) in each X, Y, Z direction for 3 times							
Shock	Malfunction	100m/s² (approx.	100m/s² (approx. 10G) in each X, Y, Z direction for 3 times						
Relay	Mechanical	Min. 10,000,000	operations						
life cycle	Electrical	Min. 100,000 operations at 250VAC 2A (resistive load)							
Approval		c ₹1 us (Except for AC/DC power type)							
Weight ^{*1}		(approx. 249g) FX4-2P:	FX6: Approx. 395g (approx. 259g) FX6-2P: Approx. 398g (approx. 262g) FX6-I: Approx. 351g (approx. 214g)	FX4H: Approx. 349g (approx. 234g) FX4H-2P: Approx. 375g (approx. 261g) FX4H-I: Approx. 321g (approx. 206g)	FX4L-2P: Approx. 651g (approx. 467g) FX4L-I: Approx. 593g (approx. 400g)	FX6L-2P: Approx. 678g (approx. 494g) FX6L-I: Approx. 586g (approx. 404g)			

X1: The weight includes packaging. The weight in parentheses is for unit only.

XEnvironment resistance is rated at no freezing or condensation.



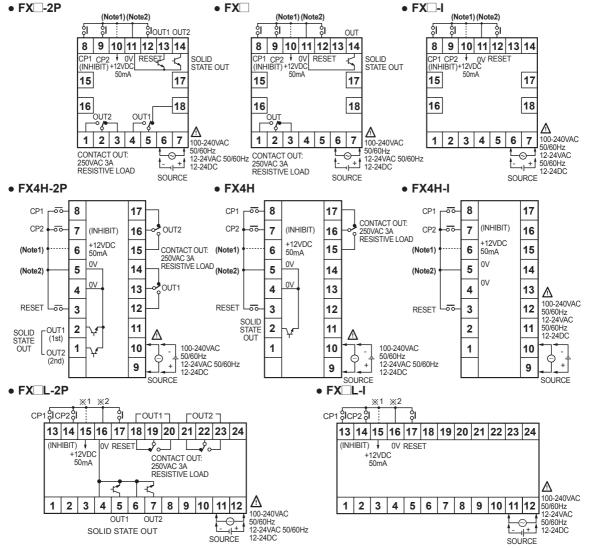

 \times CP2 (INHIBIT): Time hold terminal when using for timer. \times It is operated by power ON start type when using for timer.

1. Connection for PNP input
 2. Connection for NPN input

(A) Photoelectric Sensors

(B) Fiber Optic

> (C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

(G)

/U\

Temperature Controllers

(I) SSRs / Power Controllers

> (J) Counters

(K) Timers

> L) anel

(M) Tacho / Speed / Pulse

(N) Display Units

> D) ensor ontrollers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network

(T) Software


J-51

FX/FXH/FXL Series


Dimensions

• FX Series



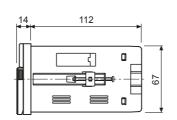

Panel cut-out

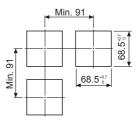



(unit: mm)

(unit: mm)

(unit: mm)

• FXH Series

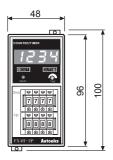


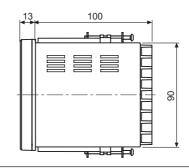


Panel cut-out

102


Min.

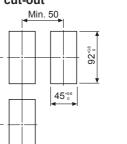

• FXL Series

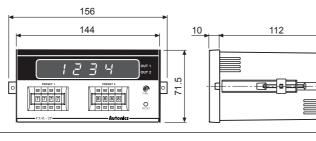



Panel cut-out

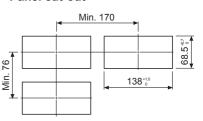

■ Input Connections

- No-voltage input (NPN) (Factory default)
- Solid-state input (Standard sensor: NPN output type sensor)

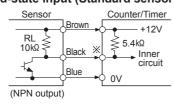


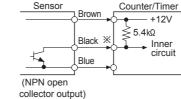

67

XCP1, CP2 (INHIBIT), RESET input


Contact input

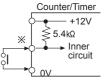


Counting speed: 1 or 30cps setting (Counter)

O Voltage input (PNP)


• Solid-state input (Standard sensor: PNP output type sensor)

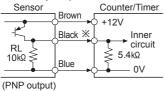



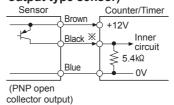

Contact input

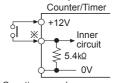

Counting speed: 1 or 30cps setting (Counter)

Input Logic Selection

FX Series

Input logic is changeable by input logic selection switch located at the one-side of

 Voltage input (PNP) · No-voltage input (NPN) NPN [■ PNP NPN

FXL Series

Input logic is changeable by input logic selection switch located at the terminal block.

 No-voltageinpu (NPN) (NPN) F ■

· Voltage input (PNP)

■ S (PNP)

FXH Series

Input logic is changeable by input logic selection switch (SW3) located at inside of the case.

 No-voltage input (NPN)

 Voltage input (PNP)


Direction of front display

Direction of front display

XPlease be sure to turn power OFF before changing input logic.

Input & Output Connections

In case of operating the load by power supply of the sensor

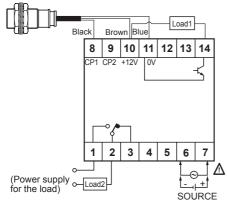


 Please select proper capacity of load, because total value of load capacity and current consumption should not be exceed current capacity. (Max. 50mA)


• How to count by external power supply

This unit starts to count when "High" level (5-30VDC) is applied at CP1 or CP2 after selecting PNP.

In case of operating the load by external power supply

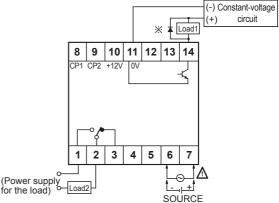


- The capacity of the load must not be exceed max. 30VDC, max. 100mA of the switching capacity of the transistor.
- Please do not supply the reverse polarity voltage. XPlease connector the surge absorber (Diode) at both terminals of the load, in case of using the inductive load. (Relay, etc.)

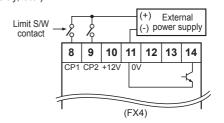

Using 2 counters with one sensor

Please connect as the power of sensor is supplied from only one of counters and design input logic with same way.

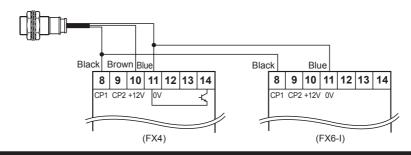

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(A) Photoelectric Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encode

(I) SSRs / Powe Controllers

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers


(R) Graphic/ Logic Panels

J-53 Autonics


FX/FXH/FXL Series

Description Of Inner DIP Switches

• FX Series

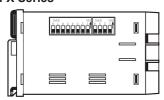




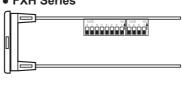

FXL Series



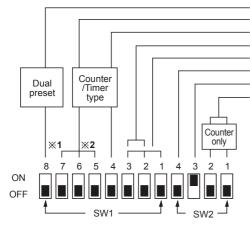

1st output one-shot (ON/OFF)

Output mode


Up/Down mode

Count input mode (Counter)

Time setting mode (Timer) Memory protection (ON/OFF)

Counter/Timer selection

Max. counting speed (Counter)

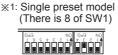

%2: Indication model (There is 5, 6, 7, 8 of SW1)



• Max. counting speed

SW2	Functions
1 2 ON OFF	1cps
OFF 2	30cps
OFF 2	2kcps
ON 2 OFF	5kcps

• Conter/Timer selection

SW	/2	Functions
3	ON OFF	Conter
3	ON OFF	Timer

Memory protection

	• •				
SW	2	Functions			
4	ON OFF	Disable the memory protection			
4		Enable the memory protection			

Up/Down mode selection


S	W1	Functions
4	ON OFF	Down mode
4	ON OFF	Up mode

• 1st output one-shot (ON/OFF)

SW	V1	Functions
8	ON OFF	1st output: One-shot output
0	ON OFF	1st output: Retained output

XThis mode selects a one-shot output (0.5sec. fixed) or retained output (Until 2nd output turns off) for 1st output in the dual preset coaunter.

XExample of F output operation mode

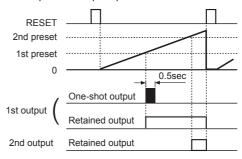

J-54 **Autonics**

■ Input Operation (Counter)

Input mo	de	SW1	No-voltage input type (NPN)	Voltage input type (PNP)
ON OFF	Up/Down-A (Command input)	ON OFF	CP1 H	CP1 H CP2 H Count value 0 1 2 3 2 1 2 3
	Up/Down-B (Individual input)	ON OFF	CP1 H CP2 H Count value 0 1 2 3 2 1 1 2 3	CP1 H CP2 H CP2 H Count value 0 1 2 3 2 1 1 1 2 3
Up mode	Up/Down-C (Phase difference input)	ON OFF	CP1 H CP2 H COunt 2 2 2 3 Count value 0 1 2 3 2 1	CP1 H CP2 H CP2 H COunt value 0 1 2 3 2 1 2 3
	Up (Count	2 3 ON	CP1 H CP2 H No counting 4 5 Count value 0 1 2 3	CP1 H CP2 H No counting 4 5 Count value 0 1 2 3
	up input)	OFF L	CP1 H No counting CP2 H S S S S S S S S S S S S S S S S S S	CP1 H No counting CP2 H S S S S S S S S S S S S S S S S S S
ON OFF	Up/Down-D (Command input)	ON OFF	CP1 H CP2 H Count n-1 n-2 n-3 n-2 n-1 n-2 n-3 0	CP1 H CP2 H COunt value 0
	Up/Down-E (Individual input)	2 3 ON OFF	CP1 H CP2 H COUNT n-1 n-2 n-3 n-2 n-1 n-2 n-3 Value 0	CP1 H CP2 H Count n n n-1 n-2 n-3 n-2 n-1 n-1 n-2 n-3
Down mode	Up/Down-F (Phase difference input)	ON OFF	CP1 H CP2 H COUNT N-1 n-2 n-3 n-2 n-1 n-2 n-3	CP1 H CP2 H
	Down (Count	2 3 ON 2 3	CP1 H CP2 H Count n n-1 n-2 No counting No counting	CP1 H CP2 H COUNTING COUNTING N-3 N-4 N-5 O
	down input)	OFF	CP1 H No counting CP2 H No counting CP2 H No counting CP2 H No counting CP3 No counting	CP1 H No counting CP2 H W No counting CP2 H No counting COUNT NO counting O No counting

※ (a): Over min. signal width, (B): Over 1/2 of min. signal width.

If the signal width of (a) or (b) is less than min. signal width, ±1 of count error occurs.

If the signal width of (a) or (b) is less than min. signal width, ±1 of count error occurs.

If the signal width (b) is less than min. signal width, ±1 of count error occurs.

If the signal width (c) is less than min. signal width, ±1 of count error occurs.

If the signal width (c) is less than min. signal width, ±1 of count error occurs.

If the signal width (c) is less than min. signal width, ±1 of count error occurs.

If the signal width (c) is less than min. signal width, ±1 of count error occurs.

If the signal width (c) is less than min. signal width, ±1 of count error occurs.

If the signal width (c) is less than min. signal width, ±1 of count error occurs.

If the signal width (c) is less than min. signal width, ±1 of count error occurs.

If the signal width (c) is less than min. signal width, ±1 of count error occurs.

If the signal width (c) is less than min. signal width, ±1 of count error occurs.

If the signal width (c) is less than min. signal width, ±1 of count error occurs.

If the signal width (c) is less than min. signal width, ±1 of count error occurs.

If the signal width (c) is less than min. signal width (c) is less than min. Signal width (c) is less than min.

If the signal width (c) is less than min. Signal width (c) is less than min.

If the signal width (c) is less than min.

If the signal width (c) is less than min.

If the signal width (c) is less than min.

If the signal width (c) is less than min.

If the signal width (c) is less than min.

If the signal width (c) is less than min.

If the signal width (c) is less than min.

If the signal width (c) is less than min.

If the signal width (c) is less than min.

If the signal width (c) is less than min.

If the signal width (c) is less than min.

If the signal width (c) is less than min.

If the signal width (c) is less than min.

If the signal width (c) is less than min.

(A) Photoelectric Sensors

(B) Fiber Optic

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

Encoders

Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

K) imers

L) 'anel leters

(M) Tacho / Speed / Pulse Meters

> splay its

)) ensor ontrollers

(P) Switching Mode Power Supplies

(Q) Stepper Motor & Drivers & Controllers

(R) Graphic/ Logic Panels


(S) Field Network


(T)


Time Setting Mode (Timer)


		- · · · /	
SW1_		4digit	6digit
A	1 2 3 ON OFF	99.99sec	99999.9sec
В	1 2 3 ON OFF	999.9sec	999999sec
С	1 2 3 ON OFF	9999sec	99min 59.99sec
D	1 2 3 ON OFF	99min 59sec	999min 59.9sec
E	1 2 3 ON OFF	999.9min	9999.9min
F	1 2 3 ON OFF	99hour 59min	99hour 59min 59sec
G	1 2 3 ON OFF	999.9hour	9999hour 59min
н	1 2 3 ON OFF	9999hour	99999.9hour

Counting Operation Of Indication Type (Counter)

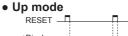


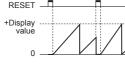

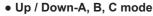


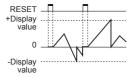


Down mode

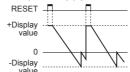


Up / Down-D, E, F mode

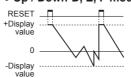


Type (Timer)

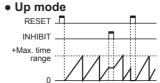

Time Operation Of Indication

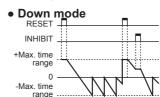


Setting Function Of Decimal Point

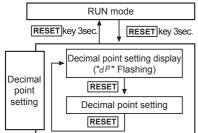

- XIt advances to "Decimal point setting mode" if press RESET key for 3sec.
- XIt returns to RUN mode by press RESET key for 3sec in "Decimal point setting"
- XIt returns to RUN mode if no RESET button or digital switch (Dual-setting digital switch for dual preset type) is applied for 60sec. in the "Decimal point setting
- XThe decimal point setting does not exist in indicator.

Decimal point setting

. The decimal point setting of 6digits indicator

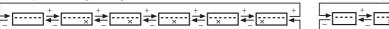

- The decimal point setting of 4digits indicator
- XExisting decimal point setting is displayed when entering into decimal point setting mode.
- XIf pressing one of digital switch (2nd preset type: 2nd preset digital switch) Up (+) buttons in decimal point setting mode, decimal point will be moved to Up (+) direction.
 - If pressing one of digital switch (2nd preset type: 2nd preset digital switch) Down (-) buttons, decimal point will be moved to Down (-) direction

J-56

(A) Photoelectric Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encode

(I) SSRs / Powe Controllers

(N) Display Units


(O) Sensor Controllers

(P) Switching Mode Powe Supplies

& Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices

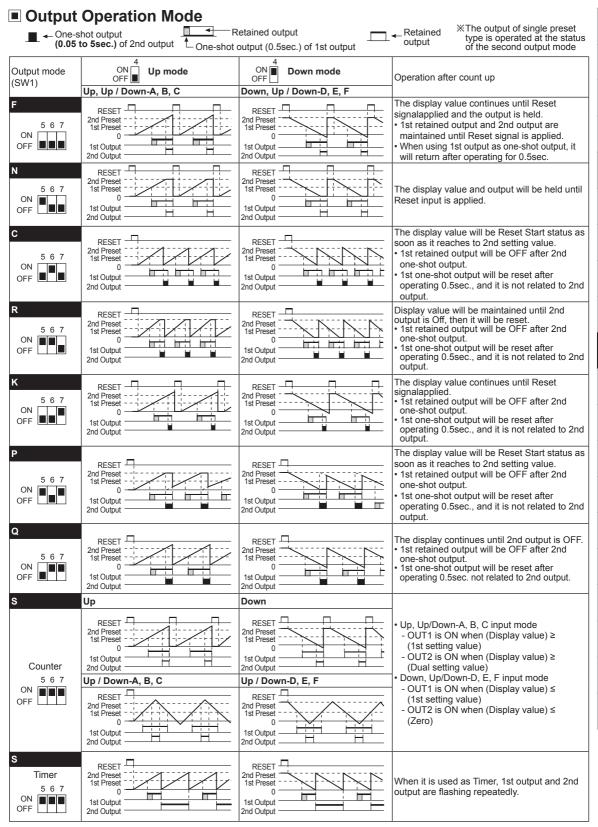

XOne-shot output time is set by front TIME adjuster.

Autonics J-57

FX/FXH/FXL Series

Proper Usage


O Reset

Reset

In case of changing the input mode after supplying the power, please provide an external reset or manual reset. If reset is not executed, the counter will be working in previous mode.


• Reset signal width

To guarantee proper reset, the signal must be supplied for a minimum of min. 20ms regardless the signal comes from a contact or a solid-state input.

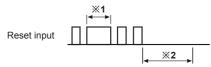

- ※1: In case of a contact reset, contact chattering will not affect the reset as long as it is applied for a minimum of 20ms.
- ※2: Input signal at CP1 & CP2 must be applied for a minimum of 50ms after the reset is removed.

O Mini. count signal width

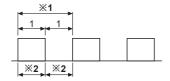


%1: Please make duty ratio (ON/OFF) as 1:1.

*2: Min. signal width 1cps: Min. 500ms 30cps: Min. 16.7ms 2kcps: Min. 0.25ms 5kcps: Min. 0.1ms

Max. counting speed

This is a response speed per 1 sec. when the duty ratio (ON:OFF) of input signal is 1:1. If the duty ratio is not 1:1, the width between ON and OFF should be over min. signal width and the response speed will getting slower against input signal. If either ON or OFF signal is shorter than minimum signal width, this product may not respond.

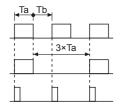


Ta (ON width) and Tb (OFF width) needed to be over min.signal width.

Max. counting speed is 1/2 value of rated spec. when duty ratio is 1:3.


It can not respond if it is smaller than min. singal width (Ta).

O Power


The inner circuit voltage starts to rise up for the first 100ms after power on, the input may not work at this time. And also the inner circuit voltage drops down for the last 500ms after power off, the input may not work at this time.

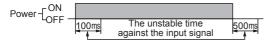

O INHIBIT (For timer)

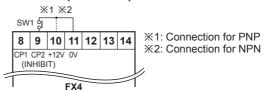


- INHIBIT mode is active when SW1 turns ON. (Time Hold)
- When power is applied, it starts to progress and INHIBIT mode is used to stop the time is under the progress at the moment
- When SW1 is OFF, timer starts to progress again.

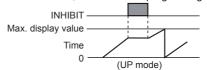

O How to use the sticker

The below sticker can be found inside the box. Use the sticker according to application as follow;

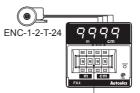



Please put black dot.

Please put black dot.

© Error display

Error signal	Error description	Returning method
		Change the setting value to non zero status
ErrO	When 2nd setting value is smaller than 1st setting value	Make 2nd setting value bigger than 1st setting value

*There is no Error display function in indication type.

XThere is no Error function in indicator.

WWhen Error is display, the OUTPUT continues OFF state.

 \times 1st output maintains OFF status by 1st setting value as 0.





O Case & DIP switch detachment

FXH Series

FXL Series

1 Push down the front guide.

② Pull out the front guide.





Unscrew the rea bolt, and pull the body backward.



XPlease be careful of the injury caused by tools.